




TURBO-TWIST™


QUICK SETUP INSTRUCTIONS

1. UV lamp installation

① Remove threaded cap. Install UV lamp into socket until lamp "clicks" into place.

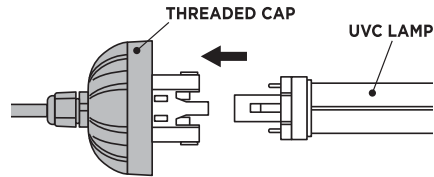

② Make sure that the flat O-ring gasket is properly positioned inside the threaded cap (already installed in unit). Screw the threaded cap tightly back into place.

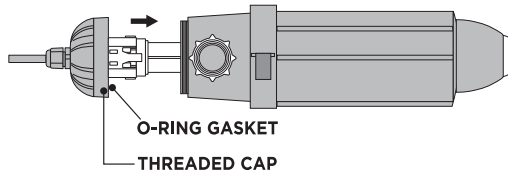


Note: The plug and cord should be turned together when screwing the threaded cap back into place.

2. Set up and positioning

Adjusting the hose barb inlet and outlet.


The hose barbs can be positioned in four different locations to facilitate connections to other applications.

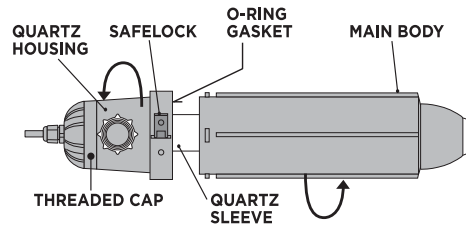

① Lift the red safelock and unlock the quartz housing. (Picture 1)




② Carefully twist the quartz housing and the main body opposite of each other. (Picture 2)

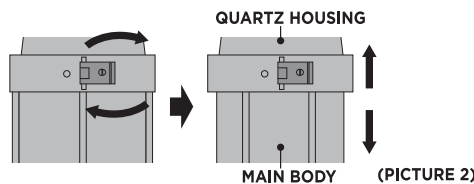


ATTENTION: For questions or concerns about your new UV Sterilizer, please contact Central Aquatics at 1-800-255-4527. Do not return to place of purchase.


③ The quartz housing can now be rotated 360°. (Picture 3)
Adjust the orientation of the hose barb and set the main body into the quartz housing.

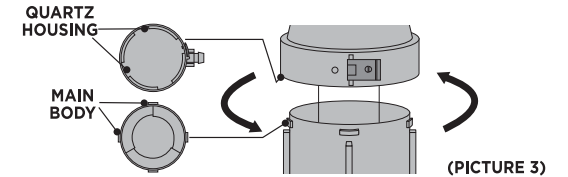


④ Combine the main body with the quartz housing and rotate according to the arrowhead "close" printed on the main body. (Picture 4)

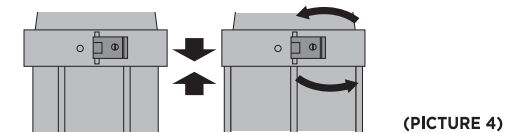

⑤ Press in the red safelock and the UV Sterilizer is now ready to install. (Picture 5)

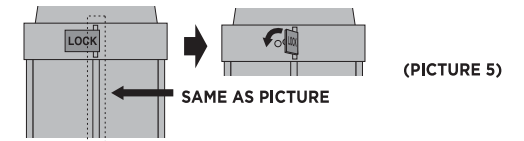

PARTS DIAGRAM

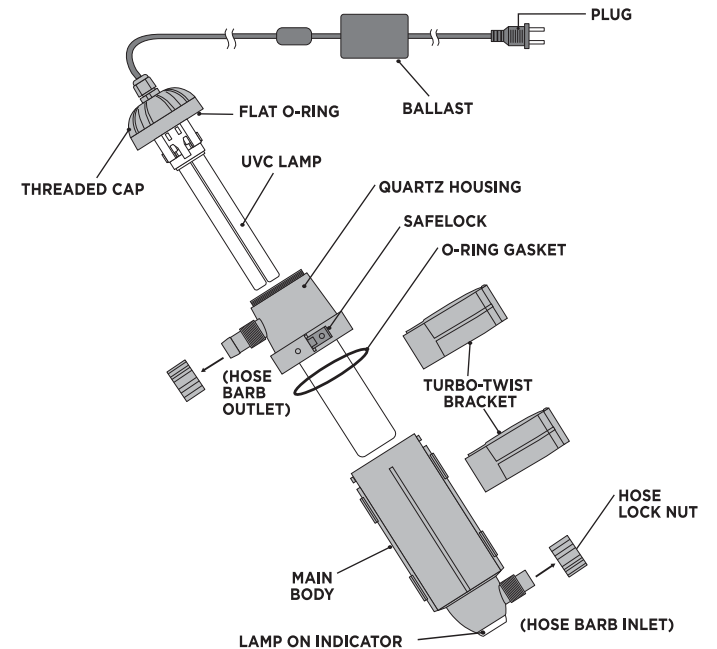

* Water pump not included.